

Product No. 4095-506-10

S No.

FAN No. **7312904095567**



Classic Globe Sensor

The Classic series is an old favourite of our assortment. Ideal in most areas where functionality and timeless design are the key words. Classic is available in different combinations and are also available with a grey or a brown glazed base as option.

Specification

Base material Porcelain Lampholder E27

Light source Max 20W CFL (not incl.)

Voltage 230V

Installation Ceiling/wall

Base colour White NCS S 1502-G50Y

Safety class I


Protection class IP44 Energy class -

T₀-30 - +25Height305 mmDiameter Ø300 mmGlassMatt opalThread185,5 mmWeight3,2 kg

Design Håkan Svennesson SD

Installation

Insert the mains supply cable through the bottom inlet. Fix the light fitting to the wall or to the ceiling with suitable screws, make sure that the arrow and text UP on the bottom of the base points upwards for wall installation. Connect the leads to the terminals. Set the sensor functions. Insert a light source and then fasten the shade by turning it clockwise. Make sure the gasket between the glass and base is in place.

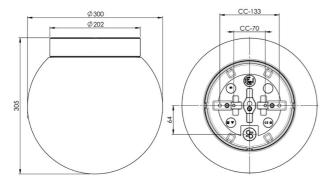

Technical information

Sensor function: Off/On: The light fiting is turned on by movement. Daylight control: The fittingcan be set to remain turn down to the luminosity desired, e.g. daylight. Hold time: How long the fitting will remain lit after movement. Technical data: The microwave movement-sensor is adapted for indoor and outdoor use. Master/slave coupling: Max 800W resistive or 400W inductive load. Installation height: Max 5 m. Max range: 4-10 m depending on installation, can be adjusted to 10/30/50/75/100 % of the max range. Hold time: 5s/30s/180s/300s/15 min/25 min, can be adjusted. Daylight control: 2-30 lux. Silicone gasket between glass and base. Four Ø 5mm hole for installation. CC measurements 133 mm or 70 mm. One bottom inlet for two mains supply cables. Terminal connection of max 2 x 1,5 mm2. Bridging is possible. Bottom inlet, three knock out openings.

Maintenance

Switch off the power to the fixture. Remove the shade and clean it. Do not use cleaning agents containing solvents. Change the light source if necessary. Check the gasket and change it if necessary. Replace the shade.

Spare parts

Shade: Part no 1-6140-1 Gasket: Part no 3431

If the luminaire is modified the person responsible for the modification shall be considered manufacturer. Subject to errors in text. We reserve the right to change the technical specifications (without notice).



